Table of Contents	
Case Options	
Standard Kits	
Component Identification	2
Assembly	
-	

View instructions online:

Prefer to watch a video: http://skyline.com/product-videos


http://skyline.com/instructions

Utility Case Option Option Option Option Option Option

Skyline°

INSTRUCTIONS

Standard Kits

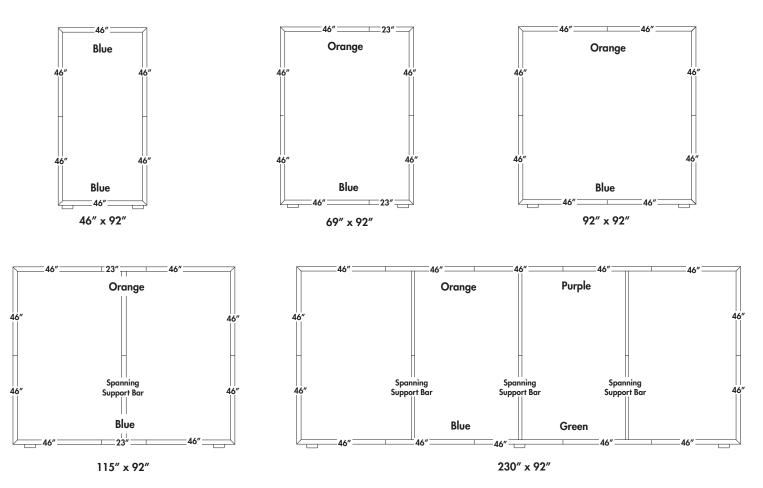


Case Options

PictureGlow is a trademark of Skyline Exhibits Patents Pending ©2019 Skyline Exhibits

page 1 of 7

Component Identification


Standard Kits

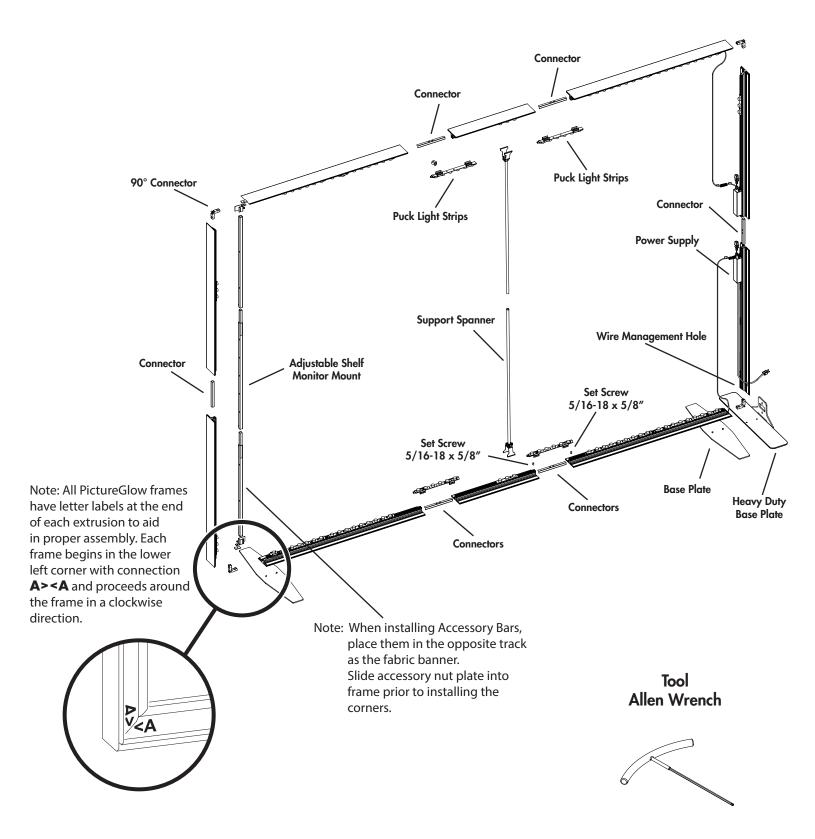


Assembly

- 1) Place drop cloth on floor.
- Identify bottom of frame by holes for the base plates.
 Indentify wire management hole in the extrusion.
- 3) Assemble entire frame flat on the floor.
 - a. Make sure bottom extrusions have holes for feet.
 - b. Make sure verticals with power supplies are oriented with the wire management hole down near the floor. Insert accessory nut plate, if accessory supports are needed (see step 6).
 - c. Tighten set screws just enough to align the set screw into the connector holes. Tighten lightly across all extrusions and repeat until set screws are evenly tightened from extrusion to extrusion. If set screws are not aligning with the recessed hole in the connectors loosen slightly and reposition the connector as needed before re-tightening.
 - d. Install base plates.
- 4) Snap 6 puck lights onto frame in spaces between permanent lights.


Only remove lights with clips. Do Not unscrew lights.

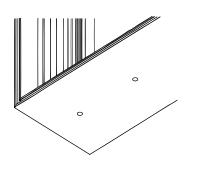


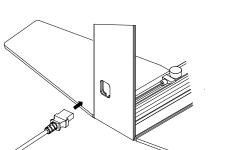


INSTRUCTIONS

Skyline[®]

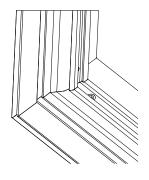

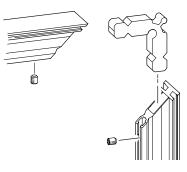



Extrusions must contact each each other squarely before tightening set screws.

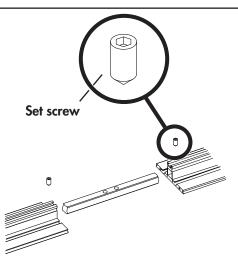

Extrusions must contact each other squarely before tightening set screws.

Heavy Duty base plate used on 20' frame and is not available as standard on other sizes.

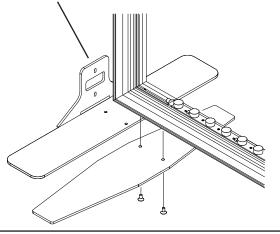

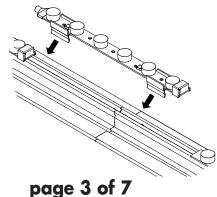

5) Connect matching lights with barrel plugs and colored flags. (Tuck wire in to prevent shadowing)

Unplug lights before dismantling the frame.

Skyline[®]


INSTRUCTIONS

b.

- Assemble accessory support (This needs to be assembled before frame is assembled.)
 - a. Slide nut plates into frame extrusion, on the backside of fame and adjust locations.
 - b. Connect mounting bar components.
 - c. Screw accessory bracket into nut plate.
 - d. Snap accessory mounting bar into clips at top and bottom with the holes of the accessory bar facing side to side, not front to back.

Accessory Nut Plate

7) Secure accessories to accessory mounting bars with screws.

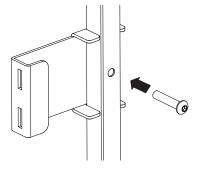

Shelf Bracket

page 4 of 7

Monitor Mount

PictureGlow is a trademark of Skyline Exhibits Patents Pending ©2019 Skyline Exhibits




- 8) Connect support bar only on 10' and 20' frames.
 - a. Snap bracket into slot. DO NOT cover light.
 - b. Snap clip over pole.
- **Skyline**[®] 0


- 9) Connecting lights
 - a. Connect wires from power supply to lights by matching colors on wires, power supplies and lights.

(Reference color layout on page 1)

- b. String cord through wire slot in frame. Plug into bottom of the lowest power supply.
- c. Install wire management clips.
- d. String wires through wire management clip ensuring wires do not protrude above lights or into graphics.
- e. Plug jumper cords from power supply to light.

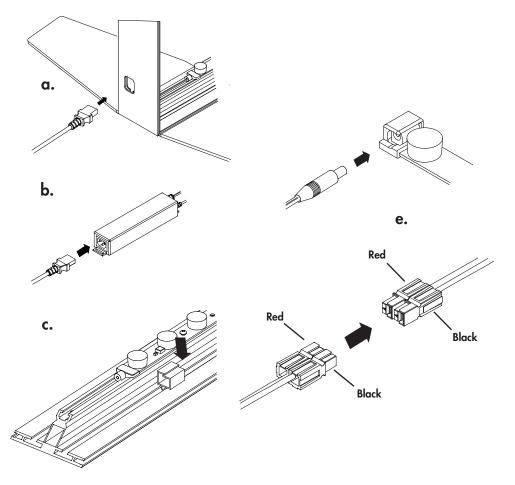


INSTRUCTIONS

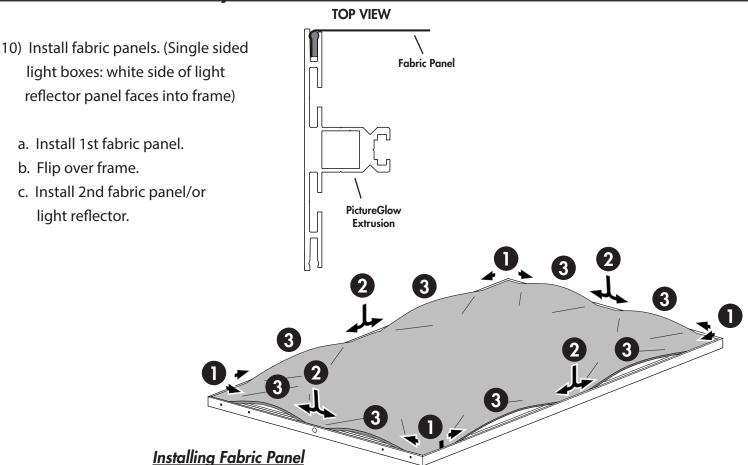

- 1. Start at the corners of the assembly. Work the FlexLock[™] edge of the panel into the extrusion at each corner.
- **2.** Press the FlexLock[™] edge of the panel into the extrusion near the middle of each extrusion.
- **3.** Work the panel into the extrusion from the corners inward and the middle outward.
- **4.** To Dismantle, lay frame assembly on floor covered with clean drop cloth provided. Pull tab on graphic to remove it. To help reduce wrinkling, carefully pack fabric panel and pack with core into fabric panel storage bag.

Backlit Fabric Packing Instructions

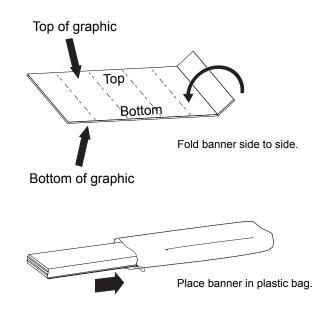

Packaging Graphic this way will protect your graphic and minimize wrinkles. IRON OR STEAM GRAPHIC ON FRAME - ONLY AS NEEDED

page 6 of 7

